# Table of Contents

Introduction……..…….... 1

Package Content……..…… 1

System Requirement…… 2

Dimensions……...…… 2

Installation…… 3

Formatting…… 8

Extra power cable…….…… 8

FAQ……...…… 9

## Introduction

Jazz EB207S is a slim, compact and outstanding looking SATA to USB 2.0 2.5” HDD enclosure. The case is made of aluminum and steel mesh as one of the coolest enclosures available. It’s also small enough to fit in your pocket, making it extremely convenient to carry anywhere; furthermore, it can be connected to a PC or a Mac.

## Package Content

a. Jazz EB207S

b. USB cable

c. Extra power cable

d. Accessory bag（screws*3 + rubber feet*4）

e. Travel bag

f. User’s Manual

## System Requirement

a. Hardware: PC or MAC with USB interface

b. OS requirement: Windows 2000, Windows XP, Windows ME, Windows Vista（No driver needed）

Windows 98/SE (please log on www.enermax.com for 98SE's driver)

Mac OS 8.6 or higher

## Dimensions

**Dimensions:** 138.8mm x 78.3mm x 17mm / 5.46" × 3.08" × 0.66"

# Installation

a. Unlock 2 screws and remove the cover (See Figure A)

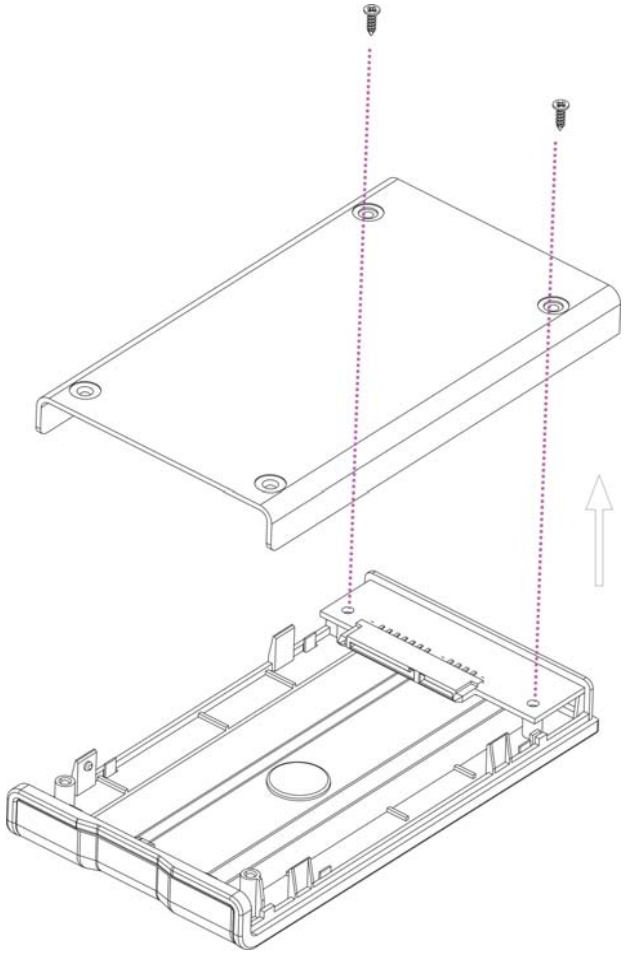

Figure A

b. Connect your hard drive to the SATA PCB connector (See Figure B)

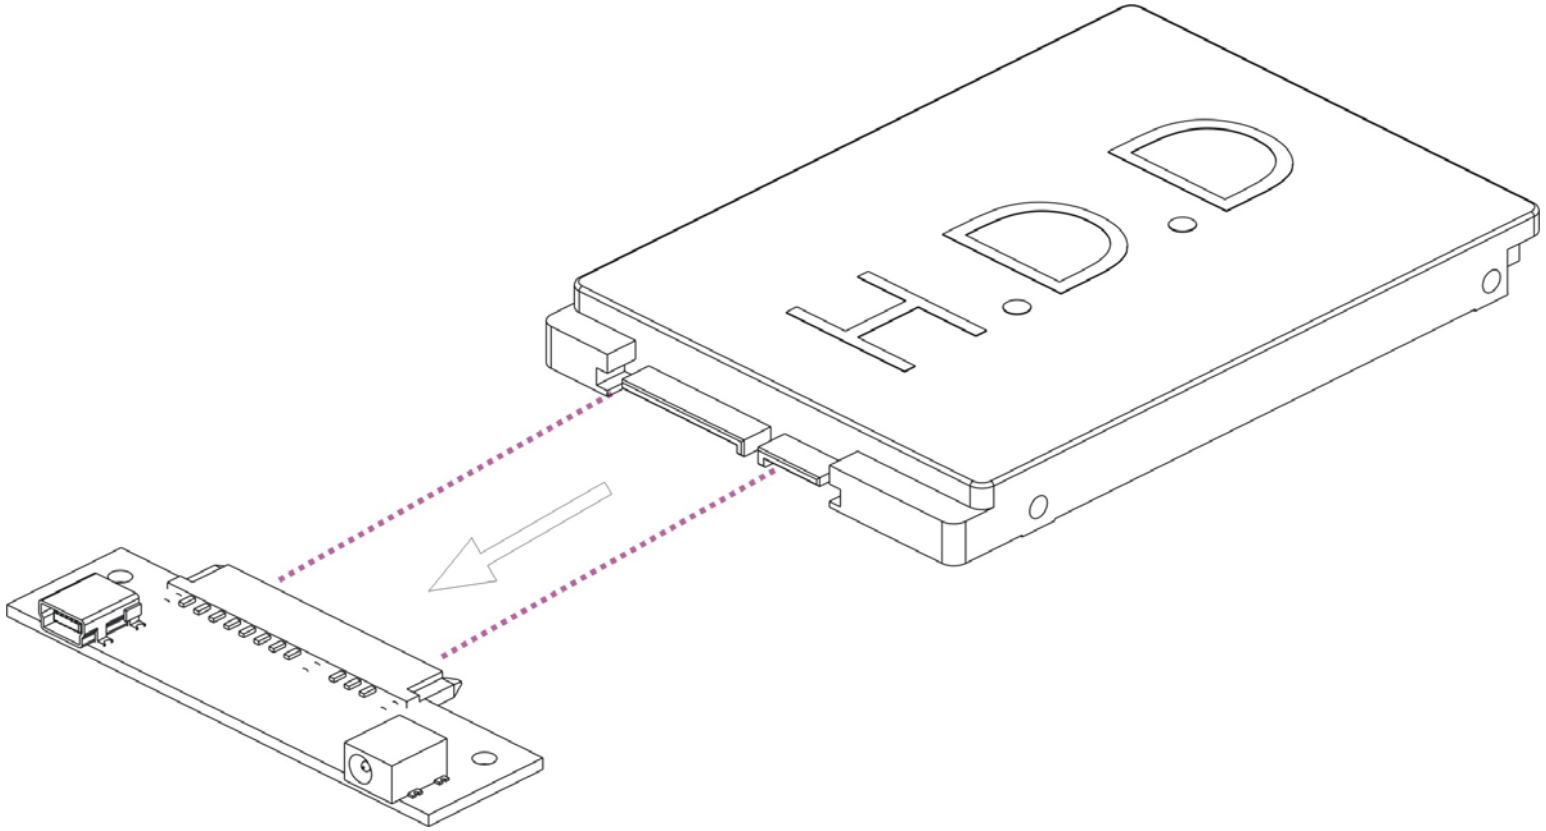


Figure B

c. Place your HDD（with PCBA）on the base. (See Figure C)

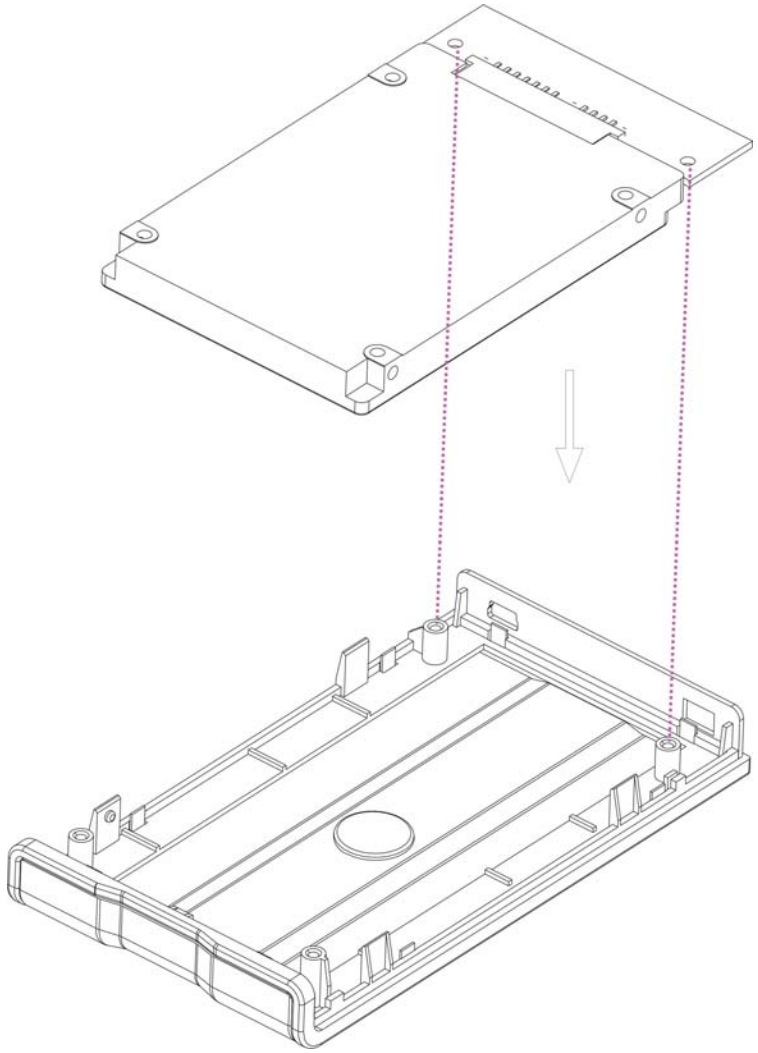

Figure C

d. Put the cover on the base and please notice the triangle mark should be always toward the right direction.

Lock the enclosure with screws. (See Figure D)

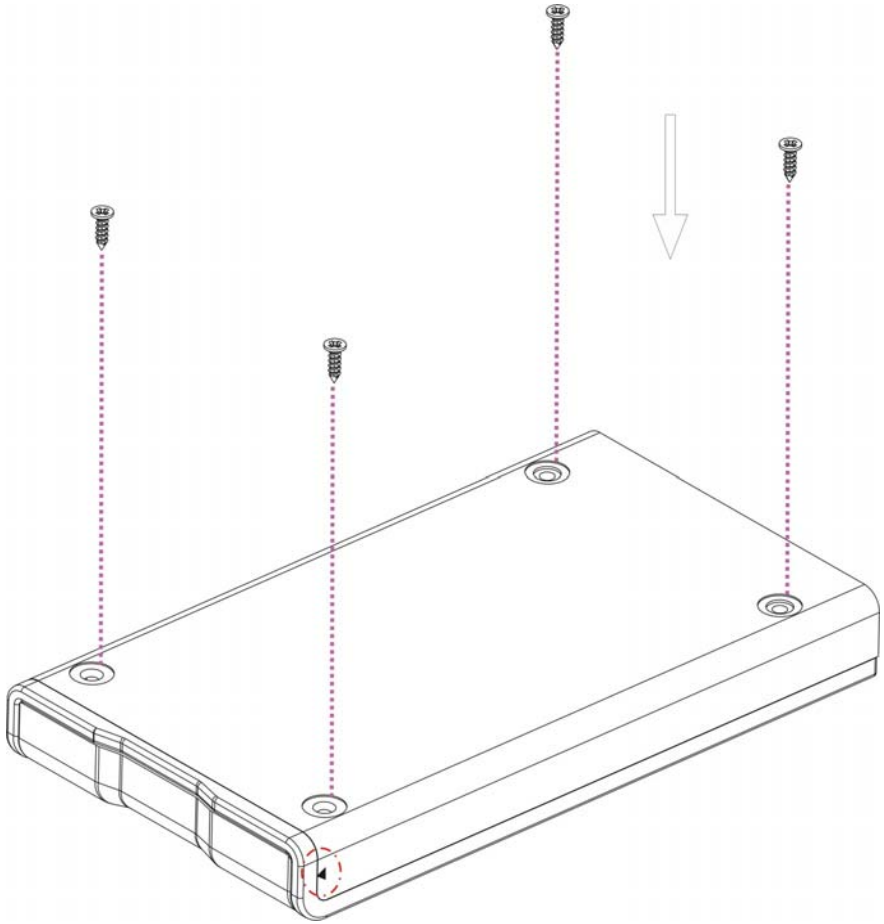

Figure D

e. Stick rubber feet enclosed in the package. (See Figure E)

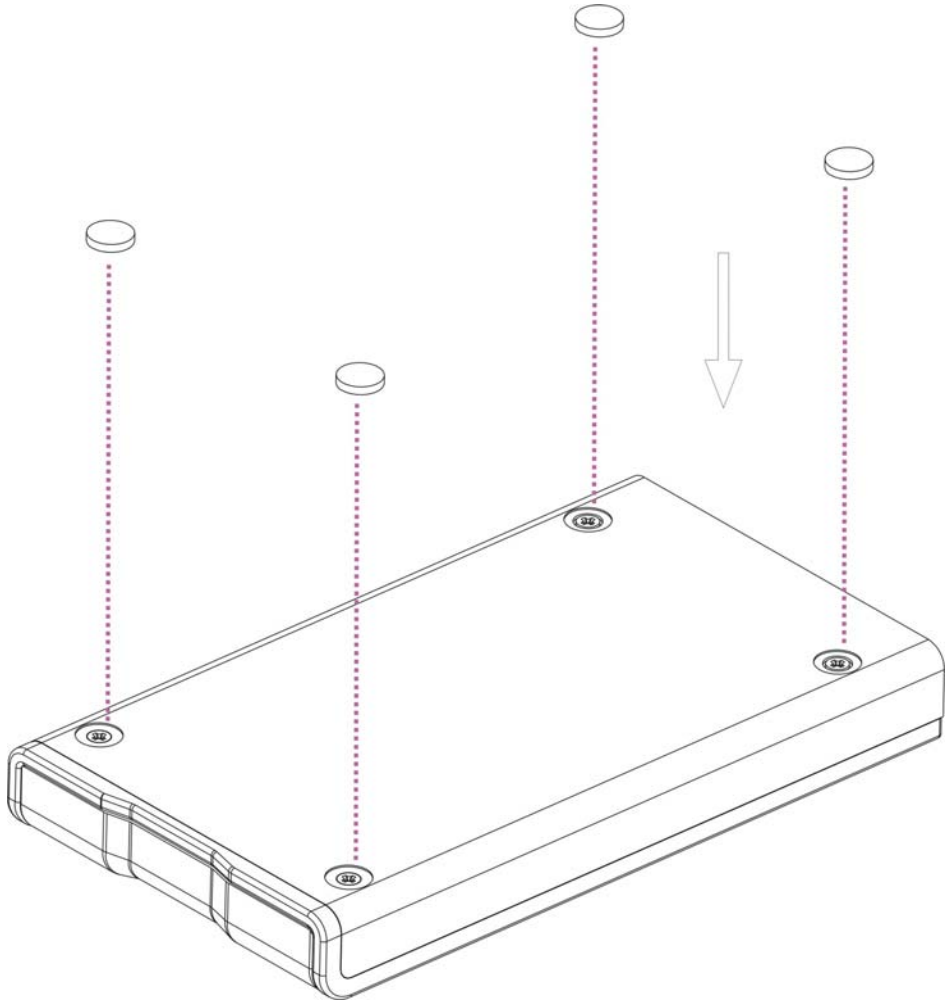

Figure E

## Formatting

Please have the hard disk formatted before the first time use.

## Extra power cable

If the following two situations happened, JAZZ enclosure may need extra power support. Please connect the USB-DC Jack cable to your PC/NB for extra power support.

- Low input power (since some laptop manufactures may remove some power current from USB port to reduce laptop heat)
- HDD capability over 120GB (may require more power for operation)

# FAQ

Q 1: I could see the icon at the right down comer on the screen, but I still couldn’t find my external HDD.

A1: a.Please make sure your HDD has been installed correctly.

b.Please make sure your HDD has been set in “Master” position.

c.Please make sure you have installed correct driver for this enclosure.（for Windows 98SE）

d.Please make sure your HDD has been formatted.

© Copyright 2007 Enermax Technology Corporation. All Rights Reserved.

The information contained in this manual is believed to be accurate and reliable. Enermax Technology Corporation assumes no responsibility for any errors contained in this manual. Enermax Technology Corporation reserves the right to make changes in the specifications and/or design of this product without prior notice. The diagrams contained in this manual may also not fully represent the product that you are using and are there for illustration purposes only.

All mentioned company and product names are trademarks or registered trademarks of their respectable owners.